
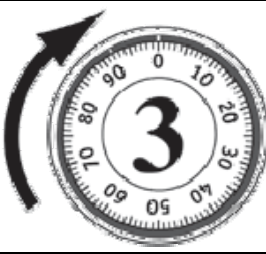 
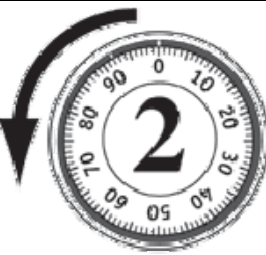 
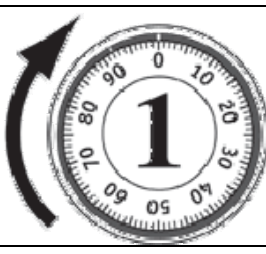 


## Combination Lock Directions - 3 Wheel S & G Style

	<p><b>Turn the dial to the LEFT more than 4 times:</b></p> <p>Pass through the first combo number 3 times, then set the combo number at notch</p>	
	<p><b>Turn the dial to the RIGHT 3 times:</b></p> <p>Pass through the second combo number twice, then set the 2nd combo number at the notch.</p>	
	<p><b>Turn the dial to the LEFT 2 times:</b></p> <p>Pass through the third combo number once, then set the third combo number at the notch.</p>	
	<p><b>Turn the dial to the RIGHT SLOWLY until the dial stops.</b> The combination lock is now open. If the lock spins freely, then the correct sequence or combination has been used.</p>	
	<p>You should now be able to turn the handle and open the safe. Please keep your combination in a safe place, away from your safe.</p>	