

# Defiance Safe 2 Hour Fire Safe Instruction Sheet

## How to open Electronic Digital Lock Safe with Key

### To Open safe for the first time,

1. Press **ENTER** (Green lamp lights up)
2. Press **7 7 7 7** (Factory default code)
3. Press **END** button (same as Enter)

You will hear an "OK" melody. Within 4 seconds turn the handle right and open door

**Note:** The key lock may be deadlocked. You need to turn the key anti-clockwise 360°



## How to set your personal code

User can hold 2 personal number (2-25 digits available)

### To Change Pin Number One

1. **Open** the door using existing code
2. Press the Button on the **INSIDE** of door
3. Press the **ENTER** button
4. Enter your **NEW CODE**
5. Press the **END** button (same as enter)
6. You will hear an "OK" Melody
7. Check new number **ENTER -> CODE ->END**

### To Change Pin Number Two

1. **Open** the door using existing code
2. Press the Button on the **INSIDE** of door
3. Press the **STORE** button
4. Enter your **NEW CODE**
5. Press the **END** button (same as enter)
1. You will hear an "OK" Melody
2. Check new number **ENTER -> CODE ->END**

### Notes on changing personal codes:

- Always check the new code with the **DOOR OPEN**
- Old numbers shall be replaced with new one
- Codes must be between 2 and 25 digits long
- Long delays between entering numbers may cause problems. After pressing the button on the inside of door you must enter the code within 5 seconds
- Green lamp must turn on while changing your code. (Check you pressed button on inside of the door.)

### Trouble Shooting

**Problem:** When code is entered Red lamp turns on and "ERROR" Melody played

**Cause:** Incorrect opening sequence was used (safe has detected incorrect code)

**Solution:** Check code and try again

**Problem:** Safe won't work or Safe won't open after setting code

**Cause:** Incorrect opening or setting sequence was used 3 times in a row and the safe has detected incorrect code. This triggers a time delay before re-entering the code


**Solution:** Allow safe "Time Out" for 10 min.

**Problem:** All key buttons do not work except **STORE** key

**Cause:** The button on the inside of door was held in and not pressed.

**Solution:** This places the safe in protective mode. To remove this mode, enter the code as per normal *except* substitute the "Store" button for "Enter". EG **STORE -> Personal Code -> End**. Then open the safe as per normal **ENTER -> Personal Code -> End**

## How to Change battery

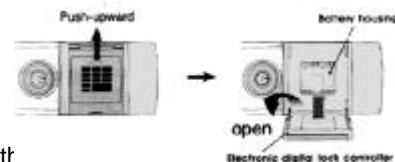

1. When the battery is low the red lamp will glow after the button is pressed. Only a few openings are now possible
2. The battery housing is located behind the square shaped Electronic Digital Lock (EDL) controller
3. Slide the EDL controller "UP" and "Fold" forward
4. Change 4 x AA batteries. Note: Always use good quality alkaline batteries. Other types may cause problems
5. Expected battery life of approx 1 year if used 5 times or less a day